


ARIES_MICRO V1.0 PINOUT DIAGRAM

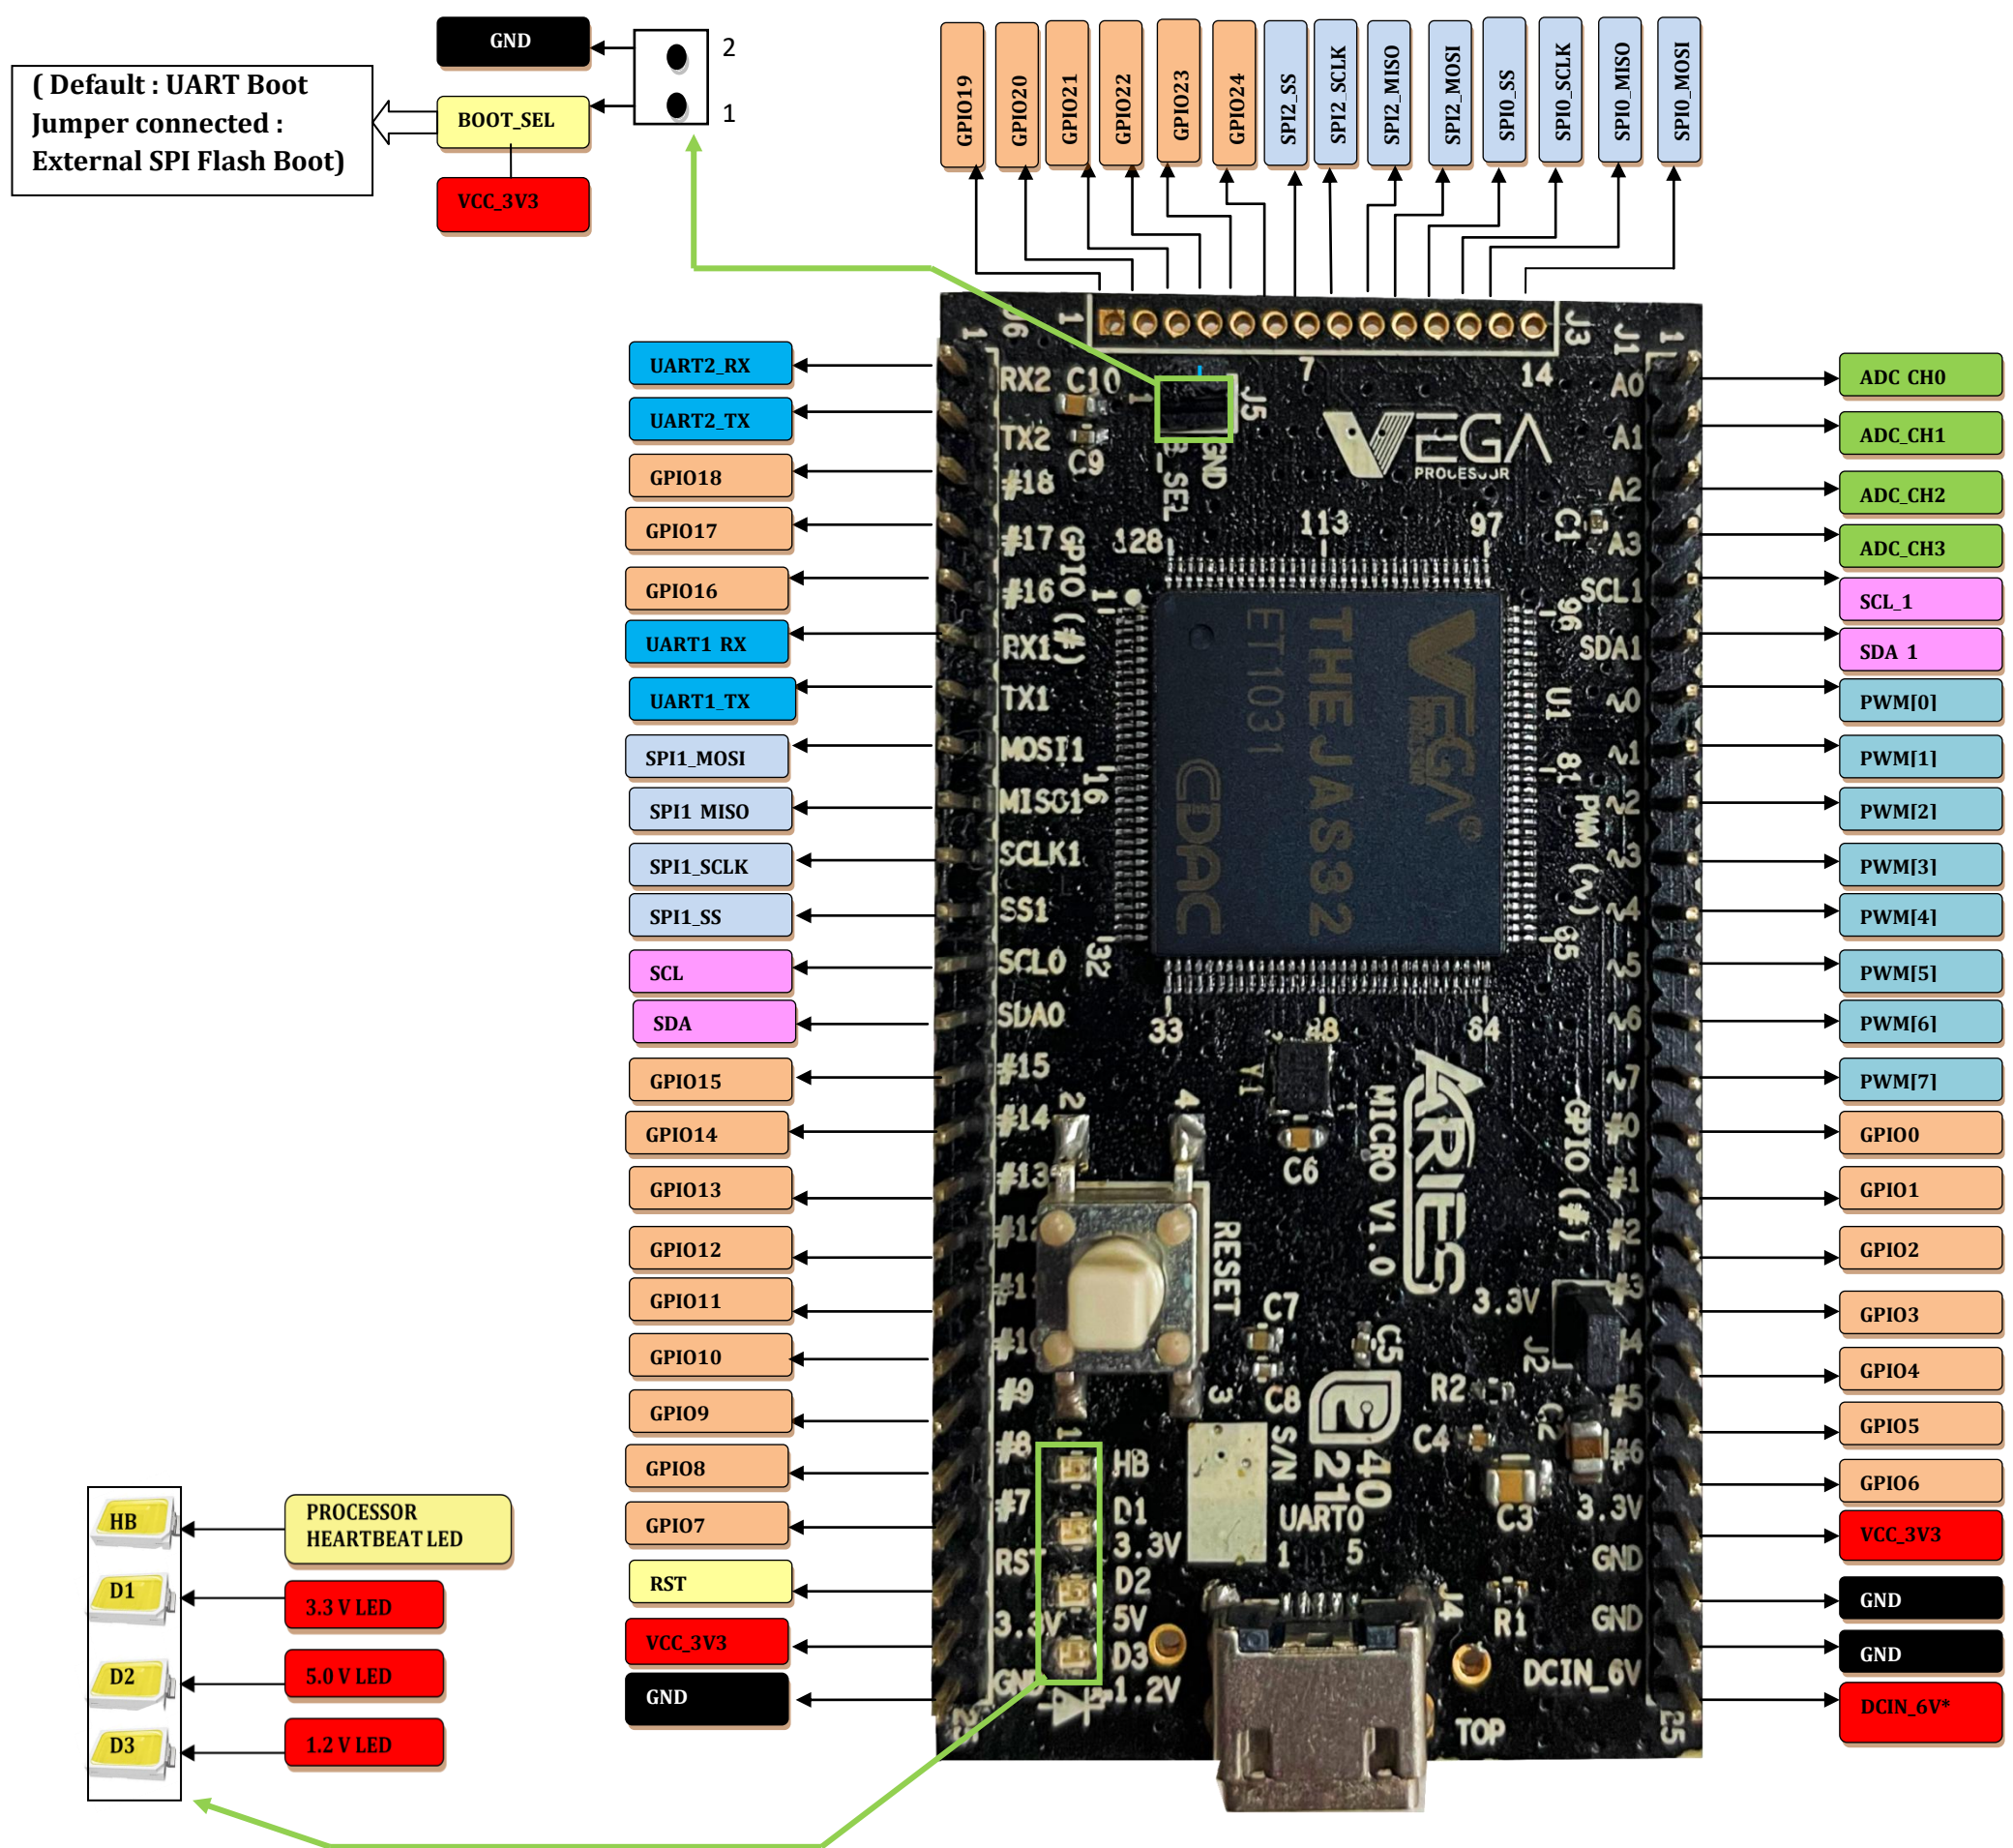

LEGEND

- POWER
- GROUND
- ANALOG
- SPI
- UART
- I2C
- PWM
- GPIO
- CONTROL

(Default : UART Boot Jumper connected : External SPI Flash Boot)

*Three ways of powering Aries Micro v1.0 board:

- Using the built-in USB micro connector.
- Supplying 5V-6V to the DCIN_6V* (J1.25) pin as external supply.
- Supplying 3.3V directly to the VCC_3V3 (J1.22 or J6.24) pin.

Note : Do not power this board through USB and an external power supply at the same time.